

# LED Pattern Quick Guide

## Kvaser Leaf Light HS V2



 





 

 






 
 
 
 





 


## Kvaser Leaf V3



# LED Pattern Quick Guide

## Kvaser Leaf Light HS V2

## Kvaser Leaf V3

Pattern	Status	Description
 <div>   </div> <p>Steady green light</p>	Normal (Good)	Steady (solid) green indicating the unit is powered on and working properly.
<div>     </div> <div>      </div> <p>1 sec. 2 sec.</p>	Not Connected	Blinking green once every three seconds indicates the unit is not communicating with the PC driver. This could be caused by the driver not being installed or incompatible.
<div>     </div> <div>      </div> <p>1/4 sec. 1/4 sec.</p>	Configuration Issue	Blinks green twice every second indicating an issue with the unit's firmware or configuration.
<div>     </div> <div>     </div> <p>Blinks yellow</p>	CAN Activity	Lights up yellow when a CAN frame is transmitted or received on the bus.